



(Division of Acme Mfg. Corp.)
6532 Tower Lane
Claremore, OK 74019

(800) 647-8671 Toll Free
(918) 266-3091 Fax

SNOSTOP® PANELS MAINTENANCE

SnoStop Panels require maintenance. The intensity of the maintenance required depends on site conditions. If possible, removal during non-winter months will reduce the maintenance required of the system. Performance of the SnoStop Panels will degrade if the media becomes clogged with dirt or foreign substances.

Visual inspection is recommended monthly during any period the Panels are installed in the system, and especially during the snow season. In addition, inspection should be made after any significant snow or winter weather event. Some prolonged or severe events may require maintenance during the event to facilitate continued airflow.

If inspection reveals dirt, particulate or other clogging has occurred, remove the Snostop Panel(s) and flush with steam or water. Flushing should not have sufficient force to dislodge media panels or heat trace cables.